

	MODELOS	POSICIONAMENTO DAS CHAVES FACA										TAMPA PRINCIPAL
		1	3	5	7	9	11	13	15	17	19	
		2	4	6	8	10	12	14	16	18	20	
2 Chaves Faca												
KEY-E 001	P	P										PRETA
	PR	PR										
KEY-E 001 V.01	P	P										PRETA
	VD	VD										
KEY-E-001 V.02	P	P										TRANSP.
	PR	PR										
KEY-E 002				P			P					PRETA
				PR			PR					
KEY-E 003		C-----C										PRETA
		PR	PR									
KEY-E 004							C-----C					PRETA
							PR	PR				
KEY-E 005									C-----C			PRETA
									PR	PR		
4 Chaves Faca												
KEY-E 006	P	P	P								P	PRETA
	PR	PR	PR								PR	
KEY-E 006 V. 01	P	P	P								P	PRETA
	VM	VM	VM								AZ	
KEY-E 007	P	P								P	P	PRETA
	PR	PR								PR	PR	
KEY-E 008	P								P	P	P	PRETA
	PR								PR	PR	PR	
KEY-E 009			P	P	P	P						PRETA
			PR	PR	PR	PR						
KEY-E 010	P	P							C-----C			PRETA
	PR	PR							PR	PR		
KEY-E-010 V.01	P	P							C-----C			PRETA
	VM	VM							PR	PR		
KEY-E 011	P								C-----C		P	PRETA
	PR								PR	PR	PR	
KEY-E 012		C-----C		C-----C								PRETA
		PR	PR	PR	PR							
KEY-E 013							C-----C		C-----C			PRETA
							PR	PR	PR	PR		

5 Chaves Faca											
KEY-E 014	P	P						P	P	P	PRETA
	PR	PR						PR	PR	PR	
KEY-E 015	P	P						C-----C		P	PRETA
	PR	PR						PR	PR	PR	
KEY-E 016	P	C-----C		P						P	PRETA
	PR	PR	PR	PR						PR	
KEY-E 017		C	C		C		C			P	PRETA
		PR	PR		PR		PR			PR	
KEY-E 018	C		C		C		C		C		PRETA
	PR		PR		PR		PR		PR		
6 Chaves Faca											
KEY-E 019	P	P	P	P					P	P	PRETA
	PR	PR	PR	PR					PR	PR	
KEY-E 020	P	P	P					P	P	P	PRETA
	PR	PR	PR					PR	PR	PR	
KEY-E 021				P	P	P	P	P	P		PRETA
				PR	PR	PR	PR	PR	PR		
KEY-E 021 V.01				P	P	P	P	P	P		PRETA
				VM	VM	VM	VM	VM	VM		
KEY-E 022	P					P	P	C-----C		P	PRETA
	PR					PR	PR	PR	PR	PR	
KEY-E 023	P	P					C	C-----C		P	PRETA
	PR	PR					PR	PR	PR	PR	
KEY-E 024	P					C-----C		C-----C		P	PRETA
	PR					PR	PR	PR	PR	PR	
KEY-E 025	C		C		C			C	C	C	PRETA
	PR		PR		PR			PR	PR	PR	

KEY-E 026	C-----C		C-----C		C-----C				PRETA	
	PR	PR			PR	PR		PR	PR	
KEY-E 027		C	C	C	C	C	C		PRETA	
		PR	PR	PR	PR	PR	PR			
KEY-E 028	C-----C		C-----C		C-----C				PRETA	
			PR	PR	PR	PR	PR	PR		
KEY-E 028 V01	C-----C		C-----C		C-----C				PRETA	
			AZ	AZ	BR	BR	VM	VM		
KEY-E 029		C	C	C	C	C	C	C	PRETA	
		PR	PR	PR	PR	PR	PR	PR		
7 Chaves Faca										
KEY-E 030	P	P	P	P			P	P	P	PRETA
	PR	PR	PR	PR			PR	PR	PR	
KEY-E 031	P	P	P	P				P	P	P
	PR	PR	PR	PR				PR	PR	PR
KEY-E 032		P	P	P	P	P	P	P		PRETA
		PR	PR	PR	PR	PR	PR	PR		
KEY-E 033	P			P	P	P	P	P	P	PRETA
	PR			PR	PR	PR	PR	PR	PR	
KEY-E 034	P			P	P	P		P	P	P
	PR			PR	PR	PR		PR	PR	PR
KEY-E 035	P	P	P	P	P			C-----C		PRETA
	PR	PR	PR	PR	PR			PR	PR	
KEY-E 036	P	P				C-----C		P	P	P
	PR	PR				PR	PR	PR	PR	PR
KEY-E 037	P	C-----C		P				P	P	P
	PR	PR	PR	PR				PR	PR	PR
KEY-E 038	P	P	C		C		C		P	P
	PR	PR	PR		PR		PR		PR	PR
KEY-E 039	P	P	P			C-----C		C-----C		PRETA
	PR	PR	PR			PR	PR	PR	PR	
KEY-E 040	P	P				C-----C		C-----C		P
	PR	PR				PR	PR	PR	PR	PR
KEY-E 041	P	C	C		C		C		P	P
	PR	PR	PR		PR		PR		PR	PR
8 Chaves Faca										
KEY-E 042	P	P	P	P	P			P	P	P
	PR	PR	PR	PR	PR			PR	PR	PR
KEY-E 043	P	P	P	P			P	P	P	P
	PR	PR	PR	PR			PR	PR	PR	PR

KEY-E 053		C-----C		C-----C		C-----C			P	P	PRETA
		PR	PR	PR	PR	PR	PR		PR	PR	
KEY-E 054	P		C	C-----C		C-----C		C-----C			PRETA
	PR		PR	PR	PR	PR	PR	PR	PR		
KEY-E 055	C	C	C	C			C	C	C	C	PRETA
	PR	PR	PR	PR			PR	PR	PR	PR	
KEY-E 056		C	C	C	C	C	C	C	C		PRETA
		PR	PR	PR	PR	PR	PR	PR	PR		
KEY-E 057		C-----C		C-----C		C-----C		C-----C			PRETA
		PR	PR	PR	PR	PR	PR	PR	PR		
KEY-E 057 V. 01		C-----C		C-----C		C-----C		C-----C			PRETA
		AZ	AZ	BR	BR	VM	VM	PR	PR		
9 Chaves Faca											
KEY-E 058	P	P	P	P		P	P	P	P	P	PRETA
	PR	PR	PR	PR		PR	PR	PR	PR	PR	
KEY-E 059	P	P		P	P	P	P	P	P	P	PRETA
	PR	PR		PR	PR	PR	PR	PR	PR	PR	
KEY-E 060	P	P	P	P	P		C-----C		C	P	PRETA
	PR	PR	PR	PR	PR		PR	PR	PR	PR	
KEY-E 061	P	P	P	P	P	C-----C		C-----C			PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR		
KEY-E 062	P	P	P	P		C-----C		C-----C		P	PRETA
	PR	PR	PR	PR		PR	PR	PR	PR	PR	
KEY-E 063	P	P		C-----C		C-----C		C-----C		P	PRETA
	PR	PR		PR	PR	PR	PR	PR	PR	PR	
KEY-E 064	C	C-----C		C-----C		C-----C		C-----C			PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR		
10 Chaves Faca											
KEY-E 065	P	P	P	P	P	P	P	P	P	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 065 - V.01	P	P	P	P	P	P	P	P	P	P	PRETA
KEY-E 065 - V.02		AZ	AZ	AZ	AZ	AZ	AZ	AZ	AZ	AZ	PRETA
	BR	AZ	VM	PR	BR	CZ	CZ	CZ	CZ	CZ	
KEY-E 065 - V. 03	P	P	P	P	P	P	P	P	P	P	PRETA
	VM	VM	VM	VM	VM	VM	VM	VM	VM	AZ	
KEY-E 065 V. 04	P	P	P	P	P	P	P	P	P	P	TRANSP.
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 065 V. 05	P	P	P	P	P	P	P	P	P	P	PRETA
	VM	AZ	BR	PR	VM	AZ	BR	PR	AM	AM	

KEY-E 065 V. 06	P	P	P	P	P	P	P	P	P	P	PRETA
	VM	AZ	BR	PR	VM	AZ	BR	PR	CZ	CZ	
KEY-E 065 V. 07	P	P	P	P	P	P	P	P	P	P	PRETA
	VM	AZ	BR	PR	VM	PR	CZ	CZ	CZ	CZ	
KEY-E 065 V. 08	P	P	P	P	P	P	P	P	P	P	PRETA
	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	
KEY-E 065 - V.09	P	P	P	P	P	P	P	P	P	P	PRETA
	AZ	BR	VM	PR	AZ	CZ	CZ	CZ	CZ	CZ	
KEY-E 065 - V.10	P	P	P	P	P	P	P	P	P	P	PRETA
	VM	AZ	BR	PR	VM	CZ	CZ	CZ	CZ	CZ	
KEY-E 065 - V.11	P	P	P	P	P	P	P	P	P	P	TRANSP.
	BR	AZ	VM	PR	AM	AM	AM	PR	PR	AM	
KEY-E 065 - V.12	P	P	P	P	P	P	P	P	P	P	TRANSP.
	BR	VM	AZ	PR	VM	PR	AM	AM	AM	AM	
KEY-E 065 - V.13	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AM	AM	AM	AM	AM	AM	AM	AM	AM	AM	
KEY-E 065 - V.14	P	P	P	P	P	P	P	P	P	P	TRANSP.
	BR	VM	AZ	PR	AM	AM	AM	AM	AM	AM	
KEY-E 065 - V.15	P	P	P	P	P	P	P	P	P	P	TRANSP.
	BR	VM	AZ	PR	PR	PR	PR	PR	PR	PR	

KEY-E 065 V. 16	P	P	P	P	P	P	P	P	P	P	TRANSP.
	PR	PR	PR	PR	VM	VM	VM	VM	VM	VM	
KEY-E 065 - V. 17	P	P	P	P	P	P	P	P	P	P	PRETA
	BR	VM	AZ	PR	AM	AM	PR	AM	AM	AM	
KEY-E 065 - V. 18	P	P	P	P	P	P	P	P	P	P	PRETA
	BR	VM	AZ	PR	AM	AM	AM	PR	AM	AM	
KEY-E 065 - V. 19	P	P	P	P	P	P	P	P	P	P	PRETA
	BR	PR	VM	AZ	BR	BR	PR	PR	VM	VM	
KEY-E 065 - V. 20	P	P	P	P	P	P	P	P	P	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E-065 V.21	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AZ	BR	VM	PR	AM	AM	AM	PR	PR	PR	
KEY-E-065 V.22	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AM	AM	AM	AM	AM	PR	PR	PR	PR	PR	
KEY-E-065 V.23	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AM	AM	AM	AM	PR	PR	PR	PR	PR	PR	
KEYE-065 V.24	P	P	P	P	P	P	P	P	P	P	TRANSP.
	BR	PR	BR	PR	BR	PR	PR	PR	PR	PR	
KEY-E-065 V.25	P	P	P	P	P	P	P	P	P	P	TRANSP.
	BR	PR	BR	PR	BR	PR	AZ	BR	VM	PR	
KEY-E-065 V.26	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AM	AM	AM	AM	AM	AM	AM	AM	AM	PR	
KEY-E-065 V.27	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AM	AM	AM	AM	AM	AM	AM	AM	PR	PR	
KEY-E-065 V.28	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AM	AM	AM	AM	AM	AM	PR	PR	PR	PR	
KEY-E-065 V.29	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AM	AM	AM	AM	AM	PR	AM	AM	AM	PR	
KEY-E-065 V.30	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AZ	BR	VM	PR	BR	PR	BR	PR	PR	PR	
KEY-E-065 V.31	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AZ	BR	VM	PR	PR	PR	PR	PR	PR	PR	
KEY-E-065 V.32	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AZ	BR	VM	PR	BR	PR	BR	PR	AM	AM	
KEY-E-065 V.33	P	P	P	P	P	P	P	P	P	P	TRANSP.
	BR	PR	AZ	BR	VM	PR	AM	AM	PR	PR	
KEY-E-065 V.34	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AM	AM	AM	AM	AM	AM	AM	AM	PR	AM	
KEY-E-065 V.35	P	P	P	P	P	P	P	P	P	P	TRANSP.
	BR	PR	PR	PR	PR	PR	AZ	BR	VM	PR	

KEY-E-065 V.36	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AM	AM	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E-065 V.37	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AZ	BR	VM	PR	AZ	BR	VM	PR	PR	PR	
KEY-E-065 V.38	P	P	P	P	P	P	P	P	P	P	TRANSP.
	AZ	BR	VM	PR	BR	PR	PR	PR	AM	AM	
KEY-S-065 V.39	P	P	P	P	P	P	P	P	P	P	TRANSP.
	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	
KEY-E-065 V.40	P	P	P	P	P	P	P	P	P	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	VM	VM	
KEY-E-065 V.41	P	P	P	P	P	P	P	P	P	P	PRETA
	AM	AM	AM	PR	PR	PR	PR	PR	PR	PR	
KEY-E-065 V.42	P	P	P	P	P	P	P	P	P	P	PRETA
	BR	AZ	VM	PR	BR	AZ	VM	PR	PR	PR	
KEY-E-065 V.43	P	P	P	P	P	P	P	P	P	P	TRANSP.
	BR	VM	AZ	PR	AM	AM	PR	AM	AM	AM	
KEY-E-065 V.44	P	P	P	P	P	P	P	P	P	P	PRETA
	BR	BR	BR	AZ	VM	PR	AM	PR	AM	PR	
KEY-E-065 V.45	P	P	P	P	P	P	P	P	P	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	VM	
KEY-E-065 V.46	P	P	P	P	P	P	P	P	P	P	PRETA
	PR	PR	PR	PR	PR	PR	VM	PR	VM	PR	
KEY-E-065 V.47	P	P	P	P	P	P	P	P	P	P	PRETA
	AZ	BR	VM	PR	AM	PR	AM	AM	AM	PR	
KEY-E-065 V.48	P	P	P	P	P	P	P	P	P	P	PRETA
	AZ	BR	VM	PR	PR	PR	PR	PR	PR	AM	
KEY-E-065 V.49	P	P	P	P	P	P	P	P	P	P	PRETA
	AZ	AZ	BR	BR	VM	VM	PR	PR	PR	AM	
KEY-E-065 V.50	P	P	P	P	P	P	P	P	P	P	PRETA
	AZ	BR	VM	PR	AZ	BR	VM	PR	PR	AM	
KEY-E-065 V.51	P	P	P	P	P	P	P	P	P	P	PRETA
	AM	AM	AM	AM	AM	AM	AM	PR	PR	AM	
KEY-E-065 V.52	P	P	P	P	P	P	P	P	P	P	PRETA
	AM	AM	AM	AM	PR	AM	PR	PR	PR	AM	
KEY-E-065 V.53	P	P	P	P	P	P	P	P	P	P	PRETA
	AM	PR	AM	AM	AM	AM	AM	AM	AM	AM	
KEY-E-065 V.54	P	P	P	P	P	P	P	P	P	P	PRETA
	AM	PR	AM	PR	PR	PR	AM	PR	AM	AM	
KEY-E-065 V.55	P	P	P	P	P	P	P	P	P	P	PRETA
	AM	PR	AM	AM	PR	AM	AM	PR	PR	PR	

KEY-E 071	P	C----C		P	P	P	P	C----C		P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 072	C----C		C----C		P	P	P	P	P	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E-072 V.01	C----C		C----C		P	P	P	P	P	P	PRETA
	PR	PR	PR	PR	VM	VM	VM	VM	VM	VM	
KEY-E-072 V.02	C----C		C----C		P	P	P	P	P	P	PRETA
	PR	PR	PR	PR	AM	AM	AM	AM	AM	AM	
KEY-E 073	P	P	P	C----C		C----C		C----C		P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 073 V01	P	P	P	C----C		C----C		C----C		P	PRETA
	VM	AZ	BR	VM	VM	AZ	AZ	BR	BR	PR	
KEY-E 073 V02	P	P	P	C----C		C----C		C----C		P	TRANSP.
	BR	VM	AZ	BR	BR	VM	VM	AZ	AZ	PR	
KEY-E 073 V. 03	P	P	P	C----C**		C----C**		C----C**		P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 073 V. 04	P	P	P	C----C		C----C		C----C		P	TRANSP.
	VM	VM	VM	PR	PR	PR	PR	PR	PR	AZ	
KEY-E 073 V. 05	P	P	P	C----C		C----C		C----C		P	PRETA
	BR	PR	VM	BR	BR	PR	PR	VM	VM	AZ	
KEY-E 073 V.06	P	P	P	C----C		C----C		C----C		P	PRETA
	VM	VM	VM	PR	PR	PR	PR	PR	PR	VM	
KEY-E-073 V.07	P	P	P	C----C		C----C		C----C		PN	PRETA
	MA	CZ	PR	MA	MA	CZ	CZ	PR	PR		
KEY-E-073 V.08	P	P	P	C----C		C----C		C----C		P	TRANSP.
	AZ	BR	VM	AZ	AZ	BR	BR	VM	VM	PR	
KEY-E-073 V.09	P	P	P	C----C		C----C		C----C		P	TRANSP.
	PR	PR	PR	AZ	AZ	BR	BR	VM	VM	PR	
KEY-E-073 V.10	P	P	P	C----C		C----C		C----C		P	TRANSP.
	BR	PR	PR	AZ	AZ	BR	BR	VM	VM	PR	
KEY-E-073 V.11	P	P	P	C----C		C----C		C----C		P	TRANSP.
	AM	AM	AM	AZ	AZ	BR	BR	VM	VM	AM	
KEY-E-073 V.12	P	P	P	C----C		C----C		C----C		P	TRANSP.
	AM	AM	AM	AZ	AZ	BR	BR	VM	VM	PR	
KEY-E-073 V.13	P	P	P	C----C		C----C		C----C		P	TRANSP.
	AM	AM	PR	AZ	AZ	BR	BR	VM	VM	PR	
KEY-E-073 V.14	P	P	P	C----C		C----C		C----C		P	TRANSP.
	AM	AM	AM	PR	PR	PR	PR	PR	PR	AM	
KEY-E-073 V.15	P	P	P	C----C		C----C		C----C		P	PRETA
	AZ	AZ	AZ	PR	PR	PR	PR	PR	PR	AZ	

KEY-E 078	P	C	C	C	C	C	C	C	C	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 079	P	C----C		C----C		C----C		C----C		P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 079 - V.01	P	C----C		C----C		C----C		C----C		P	PRETA
	VM	PR	PR	PR	PR	PR	PR	PR	PR	VM	
KEY-E-079 V.02	P	C----C		C----C		C----C		C----C		P	TRANSP.
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 080	C	C	C	C	C	C	C	C	C	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 081	C	C	C	C	C	C	C	C	C	C	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 082	C----C		C----C		C----C		C----C		C----C		PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 082 V. 01	C----C		C----C		C----C		C----C		C----C		PRETA
	AZ	AZ	BR	BR	VM	VM	PR	PR	PR	PR	
KEY-E 082 V. 02	C----C		C----C		C----C		C----C		C----C		TRANSP.
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 082 V. 03	C----C		C----C		C----C		C----C		C----C		PRETA
	VM	VM	BR	BR	PR	PR	AZ	AZ	AZ	AZ	
KEY-E 082 V. 04	C----C		C----C		C----C		C----C		C----C		PRETA
	VD	VD	VD	VD	VD	VD	VD	VD	VD	VD	
KEY-E-082 V.05	C----C		C----C		C----C		C----C		C----C		TRANSP.
	AZ	AZ	BR	BR	VM	VM	PR	PR	PR	PR	
KEY-E 083	P	P	P	P	C----C		C----C		C----C		PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 083 V. 01	P	P	P	P	C----C		C----C		C----C		PRETA
	AZ	BR	VM	PR	AZ	AZ	BR	BR	VM	VM	
KEY-E 083 V. 02	P	P	P	P	C----C		C----C		C----C		PRETA
	VM	VM	VM	AZ	PR	PR	PR	PR	PR	PR	
KEY-E 083 V. 03	P	P	P	P	C----C		C----C		C----C		TRANSP.
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 083 V. 04	P	P	P	P	C----C		C----C		C----C		PRETA
	VM	AZ	BR	PR	VM	VM	AZ	AZ	BR	BR	
KEY-E 083 V. 05	P	P	P	P	C----C		C----C		C----C		TRANSP.
	PR	PR	PR	PR	VM	VM	VM	VM	VM	VM	
KEY-E 083 V. 06	P	P	P	PN	C----C		C----C		C----C		PRETA
	VM	AZ	BR		VM	VM	AZ	AZ	BR	BR	
KEY-E 083 V. 07	P	P	P	PN	C----C		C----C		C----C		PRETA
	PR	PR	PR		PR	PR	PR	PR	PR	PR	

KEY-E-083 V.08	P	P	P	P	C----C	C----C	C----C			PRETA
	VM	VM	VM	VM	PR	PR	PR	PR	PR	PR
KEY-E 083 V. 08 Screw System	P	P	P	PN	C----C	C----C	C----C			TRANSP.
	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E-083 V.09	P	P	P	P	C----C	C----C	C----C			TRANSP.
	VM	VM	VM	AZ	PR	PR	PR	PR	PR	
KEY-E-083 V.10	P	P	P	P	C----C	C----C	C----C			PRETA
	AZ	VM	BR	AZ	VM	VM	BR	BR	AZ	
KEY-E-083 V.11	P	P	P	P	C----C	C----C	C----C			PRETA
	PR	VM	AZ	BR	VM	VM	AZ	AZ	BR	
KEY-E 090	P	P	P	P	C----C	P	P	P	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 091	P	P	C----C	P	P	C----C	P	P	PRETA	
	PR	PR	PR	PR	PR	PR	PR	PR		PR
KEY-E 092	C----C	C----C	C----C	P	P	P	P	PRETA		
	PR	PR	PR	PR	PR	PR	PR		PR	PR
KEY-E-092 V.01	C----C	C----C	C----C	P	P	P	P	PRETA		
	PR	PR	PR	PR	PR	PR	VM		VM	VM
KEY-E-092 V.02	C----C	C----C	C----C	P	P	P	P	TRANSP.		
	PR	PR	PR	PR	PR	PR	PR		PR	AM
KEY-E-092 V.03	C----C	C----C	C----C	P	P	P	P	TRANSP.		
	PR	PR	PR	PR	PR	PR	PR		PR	PR
KEY-E-092 V.04	C----C	C----C	C----C	P	P	P	P	PRETA		
	AZ	AZ	BR	BR	VM	VM	AM		PR	PR
KEY-E-092 V.05	C----C	C----C	C----C	P	P	P	P	PRETA		
	AZ	AZ	BR	BR	VM	VM	PR		PR	PR
KEY-E-092 V.06	C----C	C----C	C----C	P	P	P	P	PRETA		
	AZ	AZ	BR	BR	VM	VM	AM		AM	PR
KEY-E-092 V.07	C----C	C----C	C----C	P	P	P	P	PRETA		
	PR	PR	PR	PR	PR	PR	AM		AM	PR
KEY-E-092 V.08	C----C	C----C	C----C	P	P	P	P	PRETA		
	VM	VM	VM	VM	VM	VM	PR		PR	AM
KEY-E-092 V.09	C----C	C----C	C----C	P	P	P	P	PRETA		
	BR	BR	VM	VM	AZ	AZ	BR		VM	AZ
KEY-E-092 V.10	C----C	C----C	C----C	P	P	P	P	PRETA		
	AZ	AZ	BR	BR	VM	VM	PR		AZ	BR
KEY-E 093	C----C	C----C	C----C	P	P	P	P	PRETA		
	PR	PR	PR	PR	PR	PR	PR		PR	PR

KEY-E 093 V01	C----C		C----C		C----C		P	P	P	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 093 V.02	C----C		C----C		C----C		P	P	P	P	PRETA
	BR	BR	VM	VM	AZ	AZ	BR	VM	AZ	PR	
KEY-E-093 V.03	C----C		C----C		C----C		P	P	P	P	PRETA
	AZ	AZ	BR	BR	VM	VM	PR	PR	PR	PR	
KEY-E-093 V.04	C----C		C----C		C----C		P	P	P	P	TRANSP.
	BR	BR	VM	VM	AZ	AZ	BR	VM	AZ	PR	
KEY-E-093 V.05	C----C		C----C		C----C		P	P	P	P	TRANSP.
	BR	BR	VM	VM	AZ	AZ	AM	AM	AM	AM	
KEY-E-093 V.06	C----C		C----C		C----C		P	P	P	P	PRETA
	AZ	AZ	BR	BR	VM	VM	AZ	BR	VM	PR	
KEY-E 094	C----C		C----C		C----C		C----C		P	P	PRETA
	VM	VM	AZ	AZ	BR	BR	PR	PR	CZ	CZ	
KEY-E 095	P	P	P	P	P	P	P	P	P	P	PRETA
	VM	AZ	BR	PR	VM	PR	CZ	CZ	CZ	CZ	
KEY-E 096	C----C		C----C		C----C						PRETA
	AZ	AZ	BR	BR	VM	VM					
KEY-E-096 V.01	C----C		C----C		C----C						PRETA
	PR	PR	PR	PR	PR	PR					
KEY-E 097	P	P	P	PN	C----C		C----C		C----C		PRETA
	VM	AZ	BR		VM	VM	AZ	AZ	PR	PR	
KEY-E 097 V. 01	P	P	P	PN	C----C		C----C		C----C		TRANSP.
	PR	AM	VM		PR	PR	AM	AM	VM	VM	
KEY-E 097 V. 02	P	P	P	PN	C----C		C----C		C----C		PRETA
	VM	AZ	BR		VM	VM	AZ	AZ	BR	BR	
KEY-E-097 V.03	P	P	P	PN	C----C		C----C		C----C		PRETA
	BR	PR	VM		BR	BR	PR	PR	VM	VM	
KEY-E-097 V.04	P	P	P	PN	C----C		C----C		C----C		PRETA
	VM	VM	VM		PR	PR	PR	PR	PR	PR	
KEY-E 098	P	P	P								PRETA
	PR	PR	PR								
KEY-E 099	P	P	C----C		C----C		C----C		C----C		PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E-099 V.01	P	P	C----C		C----C		C----C		C----C		TRANSP.
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E 100	P	P	P	PN	C----CL		C----CL		C----CL		PRETA
	VM	PR	BR		VM		PR		BR		
KEY-E 100 V.01	P	P	P	PN	C----CL		C----CL		C----CL		TRANSP.
	VM	PR	BR		VM		PR		BR		

KEY-E-114					P	P	P	P	P	P	PRETA
					PR	PR	PR	PR	PR	PR	
KEY-E-115	C-----C		P	P	P	P	P	P	P	P	TRANSP.
	PR	PR	PR	PR	AM	AM	AM	AM	AM	AM	
KEY-E-116	P	P	C-----C		C-----C		C-----C		P	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-E-117	P	P	P	PN	P	PN	C-----C		C-----C		PRETA
	VM	VM	VM		VM		PR	PR	PR	PR	
KEY-E-118	C-----C		C-----C		P	P	P	P	P	P	PRETA
	PR	PR	PR	PR	AZ	AZ	AZ	AZ	AZ	AZ	
KEY-E-119	C-----C		C-----C		C-----C		P	P			PRETA
	AZ	AZ	BR	BR	VM	VM	PR	PR			
P = Potencial C-----C = Corrente com curto circuito, acionamento duplo (Tecla + Tecla) CL = Corrente com curto circuito, acionamento simples (Tecla + Lâmina) / (*) Sem Garra ou lâmina na posição H / www.konecny.com.br											