



MODELOS

POSICIONAMENTO DAS CHAVES FACA

TAMPA PRINCIPAL

	POSICIONAMENTO DAS CHAVES FACA														TAMPA PRINCIPAL
	1	3	5	7	9	11	13	15	17	19	21	23	25	27	
	2	4	6	8	10	12	14	16	18	20	22	24	26	28	
KEY-EL 081	P	P	P	P							P	P	P	P	PRETA
	PR	PR	PR	PR							PR	PR	PR	PR	
KEY-EL 082	P	P	P	P							P	P	P	P	TRANSP.
	BR	VM	AZ	PR							BR	VM	AZ	PR	
KEY-EL 0141	P	P	P	P	P	P	P	P	P	P	P	P	P	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-EL 0142	P	P	P	P	P	P	P	P	P	P	P	P	P	P	PRETA
	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	
KEY-EL 0143	P	P	P	P	P	P	P	P	P	P	P	P	P	P	PRETA
	AM	AM	AM	AM	AM	AM	AM	AM	AM	AM	AM	AM	AM	AM	
KEY-EL 661	C---C		C---C		C---C		P	P	P	P	P	P			PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-EL 681	C---C		C---C		C---C		P	P	P	P	P	P	P	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-EL 682	C---C		C---C		C---C		P	P	P	P	P	P	P	P	PRETA
	VM	VM	VM	VM	VM	VM	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-EL 683	P	P	P	C---C		C---C		C---C		P	P	P	P	P	PRETA
	VM	VM	VM	PR	PR	PR	PR	PR	PR	VM	VM	VM	VM	VM	
KEY-EL 684	C---C		C---C		C---C		P	P	P	P	P	P	P	P	PRETA
	AZ	AZ	BR	BR	VM	VM	PR	AZ	BR	VM	AM	AM	VM	PR	
KEY-EL 685	C---C		C---C		C---C		P	P	P	P	P	P	P	P	PRETA
	AZ	AZ	BR	BR	VM	VM	AZ	BR	VM	PR	BR	PR	BR	PR	
KEY-EL 841	C---C		C---C		C---C		C---C				P	P	P	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR			PR	PR	PR	PR	
KEY-EL 842	C---C		C---C		C---C		C---C				P	P	P	P	TRANSP.
	BR	BR	VM	VM	AZ	AZ	PR	PR			BR	VM	AZ	PR	



KEY-EL 1042	C---C		C---C		C---C		C---C		C---C		P	P	P	P	PRETA
	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	PR	PR	PR	PR	
KEY-EL 1043	P	P	P	P	C---C		C---C		C---C		C---C		C---C		PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-EL 1044	P	P	P	C---C		C---C		C---C		C---C		C---C		P	PRETA
	VM	VM	VM	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	VM	
KEY-EL 1045	P	P	P	P	C---C		C---C		C---C		C---C		C---C		PRETA
	PR	PR	PR	PR	AZ	AZ	BR	BR	VM	VM	PR	PR	PR	PR	
KEY-EL 1221	C---C		C---C		C---C		C---C		C---C		C---C		P	P	PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-EL 1222	C---C		C---C		C---C		C---C		C---C		C---C		P	P	PRETA
	BR	BR	VM	VM	AZ	AZ	BR	BR	VM	VM	AZ	AZ	AM	AM	
KEY-EL 1401	C---C		C---C		C---C		C---C		C---C		C---C		C---C		PRETA
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR	
KEY-EL 1402	C---C		C---C		C---C		C---C		C---C		C---C		C---C		PRETA
	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	VM	
KEY-EL 1403	C---C		C---C		C---C		C---C		C---C		C---C		C---C		PRETA
	AZ	AZ	BR	BR	VM	VM	AZ	AZ	BR	BR	VM	VM	PR	PR	
P = Potencial C---C = Corrente com curto circuito, acionamento duplo (Tecla + Tecla) CL = Corrente com curto circuito, acionamento simples (Tecla + Lâmina) / (*) Sem Garra ou lâmina na posição H / <a href="http://www.konecty.com.br">www.konecty.com.br</a>															