

konec t y	POSICIONAMENTO DAS CHAVES FACA									INTERTRAV.	ID. TECLA	PLUG DE TESTE	
	1	3	5	7	9	11	13	15	17	19	S	S	
	2	4	6	8	10	12	14	16	18	20	N	N	
2 Chaves Faca													
KEY-E 001	P	P									N	N	KEYPLUG - 008
	PR	PR											
KEY-E 002				P			P				N	N	KEYPLUG - 008
				PR			PR						
KEY-E 003		C---C									N	N	KEYPLUG - 005
		PR	PR										
KEY-E 004						C---C					N	N	KEYPLUG - 006
						PR	PR						
KEY-E 005								C---C			N	N	KEYPLUG - 001
								PR	PR				
4 Chaves Faca													
KEY-E 006	P	P	P							P	N	N	KEYPLUG - 008
	PR	PR	PR							PR			
KEY-E 007	P	P							P	P	N	N	KEYPLUG - 008
	PR	PR							PR	PR			
KEY-E 008	P							P	P	P	N	N	KEYPLUG - 008
	PR							PR	PR	PR			
KEY-E 009			P	P	P	P					N	N	KEYPLUG - 008
			PR	PR	PR	PR							
KEY-E 010	P	P						C---C			N	N	KEYPLUG - 001
	PR	PR						PR	PR				
KEY-E 011	P							C---C		P	N	N	KEYPLUG - 001
	PR							PR	PR	PR			
KEY-E 012		C---C		C---C							N	N	KEYPLUG - 007
		PR	PR	PR	PR								
KEY-E 013						C---C		C---C			N	N	KEYPLUG - 002
						PR	PR	PR	PR				
5 Chaves Faca													
KEY-E 014	P	P						P	P	P	N	N	KEYPLUG - 008
	PR	PR						PR	PR	PR			
KEY-E 015	P	P						C---C		P	N	N	KEYPLUG - 001
	PR	PR						PR	PR	PR			
KEY-E 016	P	C---C		P						P	N	N	KEYPLUG - 005
	PR	PR	PR	PR						PR			
KEY-E 017		C	C		C		C			P	N	N	CONSULTAR
		PR	PR		PR		PR			PR			
KEY-E 018	C		C		C		C			C	N	N	CONSULTAR
	PR		PR		PR		PR			PR			
6 Chaves Faca													
KEY-E 019	P	P	P	P					P	P	N	N	KEYPLUG - 008
	PR	PR	PR	PR					PR	PR			
KEY-E 020	P	P	P					P	P	P	N	N	KEYPLUG - 008
	PR	PR	PR					PR	PR	PR			
KEY-E 021				P	P	P	P	P	P		N	N	KEYPLUG - 008
				PR	PR	PR	PR	PR	PR				
KEY-E 022	P					P	P	C---C		P	N	N	KEYPLUG - 001
	PR					PR	PR	PR	PR	PR			
KEY-E 023	P	P						C	C---C	P	N	N	KEYPLUG - 002
	PR	PR						PR	PR	PR			
KEY-E 024	P					C---C		C---C		P	N	N	KEYPLUG - 002
	PR					PR	PR	PR	PR	PR			
KEY-E 025	C		C		C			C	C	C	N	N	CONSULTAR
	PR		PR		PR			PR	PR	PR			
KEY-E 026		C---C			C---C			C---C			N	N	CONSULTAR
		PR	PR		PR	PR		PR	PR				
KEY-E 027			C	C	C	C	C	C			N	N	CONSULTAR
			PR	PR	PR	PR	PR	PR					
KEY-E 028				C---C		C---C		C---C			N	N	KEYPLUG - 011
				PR	PR	PR	PR	PR	PR				
KEY-E 028 V01				C---C		C---C		C---C			N	N	KEYPLUG - 011
				AZ	AZ	BR	BR	VM	VM				
KEY-E 029				C	C	C	C	C	C		N	N	CONSULTAR
				PR	PR	PR	PR	PR	PR				

7 Chaves Faca															
KEY-E 030	P	P	P	P			P	P	P				N	N	KEYPLUG - 008
	PR	PR	PR	PR			PR	PR	PR						
KEY-E 031	P	P	P	P				P	P	P			N	N	KEYPLUG - 008
	PR	PR	PR	PR				PR	PR	PR					
KEY-E 032		P	P	P	P	P	P	P					N	N	KEYPLUG - 008
		PR	PR	PR	PR	PR	PR	PR							
KEY-E 033	P			P	P	P	P	P	P				N	N	KEYPLUG - 008
	PR			PR	PR	PR	PR	PR	PR						
KEY-E 034	P			P	P	P		P	P	P			N	N	KEYPLUG - 008
	PR			PR	PR	PR		PR	PR	PR					
KEY-E 035	P	P	P	P	P			C----C					N	N	KEYPLUG - 001
	PR	PR	PR	PR	PR			PR	PR						
KEY-E 036	P	P				C----C	P	P	P				N	N	KEYPLUG - 006
	PR	PR				PR	PR	PR	PR						
KEY-E 037	P	C----C	P					P	P	P			N	N	KEYPLUG - 005
	PR	PR	PR	PR				PR	PR	PR					
KEY-E 038	P	P	C		C		C		P	P			N	N	KEYPLUG - 012
	PR	PR	PR		PR		PR		PR	PR					
KEY-E 039	P	P	P			C----C	C----C						N	N	KEYPLUG - 002
	PR	PR	PR			PR	PR	PR	PR						
KEY-E 040	P	P				C----C	C----C	P					N	N	KEYPLUG - 002
	PR	PR				PR	PR	PR	PR	PR					
KEY-E 041	P	C	C		C		C		P	P			N	N	CONSULTAR
	PR	PR	PR		PR		PR		PR	PR					
8 Chaves Faca															
KEY-E 042	P	P	P	P	P			P	P	P			N	N	KEYPLUG - 006
	PR	PR	PR	PR	PR			PR	PR	PR					
KEY-E 043	P	P	P	P			P	P	P	P			N	N	KEYPLUG - 008
	PR	PR	PR	PR			PR	PR	PR	PR					
KEY-E 043 - V.01	P	P	P	P			P	P	P	P			N	N	KEYPLUG - 008
	AZ	BR	VM	PR			AZ	PR	AZ	PR					
KEY-E 044	P			P	P	P	P	P	P	P			N	N	KEYPLUG - 008
	PR			PR	PR	PR	PR	PR	PR	PR					
KEY-E 045	P	P	P	P	P			C----C	P				N	N	KEYPLUG - 001
	PR	PR	PR	PR	PR			PR	PR	PR					
KEY-E 046	P	P	P			C----C	P	P	P				N	N	KEYPLUG - 006
	PR	PR	PR			PR	PR	PR	PR	PR					
KEY-E 047	P	P	P	P		C----C	C----C						N	N	KEYPLUG - 002
	PR	PR	PR	PR		PR	PR	PR	PR						
KEY-E 048	P	P		C	C	C	C		P	P			N	N	CONSULTAR
	PR	PR		PR	PR	PR	PR		PR	PR					
KEY-E 049	P	P		C----C	C----C			P	P				N	N	KEYPLUG - 009
	PR	PR		PR	PR	PR	PR		PR	PR					
KEY-E 050	P	C----C	P			P	C----C	P					N	N	KEYPLUG - 004
	PR	PR	PR	PR			PR	PR	PR	PR					
KEY-E 051			P	P	P	C----C	C----C	P					N	N	KEYPLUG - 002
			PR	PR	PR	PR	PR	PR	PR	PR					
KEY-E 052		C----C	C----C	C----C	C----C	P	P						N	N	KEYPLUG - 007
		PR	PR	PR	PR	PR	PR	PR							
KEY-E 053		C----C	C----C	C----C	C----C		P	P					N	N	KEYPLUG - 007
		PR	PR	PR	PR	PR	PR		PR	PR					
KEY-E 054	P		C	C----C	C----C	C----C	C----C						N	N	KEYPLUG - 010
	PR		PR	PR	PR	PR	PR	PR							
KEY-E 055	C	C	C	C			C	C	C	C			N	N	CONSULTAR
	PR	PR	PR	PR			PR	PR	PR	PR					
KEY-E 056		C	C	C	C	C	C	C	C				N	N	CONSULTAR
		PR	PR	PR	PR	PR	PR	PR	PR						
KEY-E 057		C----C	C----C	C----C	C----C	C----C							N	N	KEYPLUG - 010
		PR	PR	PR	PR	PR	PR	PR	PR						
9 Chaves Faca															
KEY-E 058	P	P	P	P		P	P	P	P	P			N	N	KEYPLUG - 008
	PR	PR	PR	PR		PR	PR	PR	PR	PR					
KEY-E 059	P	P		P	P	P	P	P	P	P			N	N	KEYPLUG - 008
	PR	PR		PR	PR	PR	PR	PR	PR	PR					
KEY-E 060	P	P	P	P	P		C----C	C	P				N	N	CONSULTAR
	PR	PR	PR	PR	PR		PR	PR	PR	PR					
KEY-E 061	P	P	P	P	P	C----C	C----C						N	N	KEYPLUG - 002
	PR	PR	PR	PR	PR	PR	PR								

KEY-E 061	PR	PR	PR	PR	PR	PR	PR	PR	PR		N	N	KEYPLUG - 002
KEY-E 062	P	P	P	P		C----C	C----C	P			N	N	KEYPLUG - 002
	PR	PR	PR	PR		PR	PR	PR	PR	PR			
KEY-E 063	P	P		C----C	C----C	C----C	P				N	N	KEYPLUG - 011
	PR	PR		PR	PR	PR	PR	PR	PR	PR			
KEY-E 064	C	C----C	C----C	C----C	C----C						N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR				
10 Chaves Faca													
KEY-E 065	P	P	P	P	P	P	P	P	P	P	N	N	KEYPLUG - 008
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 065 - V.01	P	P	P	P	P	P	P	P	P	P	N	N	KEYPLUG - 008
	AZ	AZ	AZ	AZ	AZ	AZ	AZ	AZ	AZ	AZ			
KEY-E 066	C	P	P	P	P	P	P	P	P	P	N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 067	P	P	P	P	P	P	P	C----C	P		N	N	KEYPLUG - 001
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 068	P	P	P	P	P	P	C	C----C	P		N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 069	P	P	P	P	P	C----C	C----C	P			N	N	KEYPLUG - 002
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 070	P	P	P	C----C	P	P	C----C	P			N	N	KEYPLUG - 003
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 071	P	C----C	P	P	P	P	C----C	P			N	N	KEYPLUG - 004
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 072	C----C	C----C	P	P	P	P	P	P			N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 073	P	P	P	C----C	C----C	C----C	P				N	N	KEYPLUG - 011
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 074	P	C----C	P	C----C	P	C----C	P				N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 075	P	P	C	C----C	C----C	C----C	P				N	N	KEYPLUG - 010
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 076	C----C	C----C	C----C	C----C	C----C	P	P				N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 076 - V.01	C----C	C----C	C----C	C----C	C----C	P	P				N	N	CONSULTAR
	AZ	AZ	BR	BR	VM	VM	PR	PR	CZ	CZ			
KEY-E 077	C----C	C----C	C----C	C----C	C----C*	P	P				N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 078	P	C	C	C	C	C	C	C	P		N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 079	P	C----C	C----C	C----C	C----C	C----C	P				N	N	KEYPLUG - 010
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 080	C	C	C	C	C	C	C	C	P		N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 081	C	C	C	C	C	C	C	C	C		N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 082	C----C	C----C	C----C	C----C	C----C	C----C					N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 083	P	P	P	P	C----C	C----C	C----C				N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 090	P	P	P	P	C----C	P	P	P	P		N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 091	P	P	C----C	P	P	C----C	P	P			N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 092	C----C	C----C	C----C	C----C	P	P	P	P			N	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 093	C----C	C----C	C----C	C----C	P	P	P	P			S	N	CONSULTAR
	PR	PR	PR	PR	PR	PR	PR	PR	PR	PR			
KEY-E 094	C----C	C----C	C----C	C----C	C----C	P	P				N	N	CONSULTAR
	VM	VM	AZ	AZ	BR	BR	PR	PR	CZ	CZ			
KEY-E 095	P	P	P	P	P	P	P	P	P		N	N	CONSULTAR
	VM	AZ	BR	PR	VM	PR	CZ	CZ	CZ	CZ			
KEY-E 096	C----C	C----C	C----C	C----C							N	N	CONSULTAR
	AZ	AZ	BR	BR	VM	VM							

P = Potencial C----C = Corrente com curto circuito (tecla / tecla) C = Corrente Simples / (*) Sem Garra ou lâmina na posição H / www.konecny.com.br